

## Installing the CAN bus Cable: non-C Series models

**Note** – Before installing the CAN bus cable, verify the CAN connectors were connected at the factory. If the connectors are disconnected, the CAN system will not work. For more information, see below.

### Step 1

The CAN bus connection is made in the electrical panel to the right of the driver's seat.




### Step 2

Pull up the floor mat and remove the access panel.



### Step 3

Verify that the CAN connectors were connected at the factory. If the connectors are disconnected, the CAN system will not work.

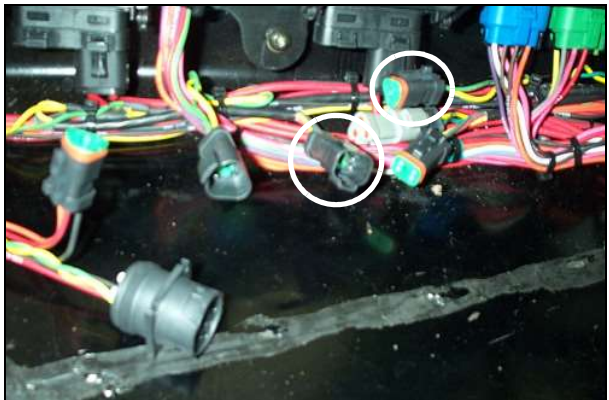

Ensure that the CAN cable has been connected together. Identify the two connectors by the attached wires:

Wire	Color	Code #
1	Green	F712
2	Yellow	F711



#### Step 4

Locate the 4 pin Deutsch DT connector that is behind the bundled wire. The connector has red, yellow, green, and black wires.

